

User's Manual MS3759

Slim Plug-In Relay Contact Converter with Isolated Dual Output

Document No: MQDDK-130116-1

Rev. 1.40



Thank you very much for employing MTT products. Upon receipt of the product(s), please check the affixed label to make sure that the specifications shown therein conform to your requirements. If you find any discrepancies and/or any damage on the product(s), please contact MTT or its local representatives. You can be assured that all the MTT products are manufactured according to the strict quality control standards.

1. Introduction



For proper operation of the instrument(s), we recommend that you carefully read this manual prior to operation. The manual should be retained for future reference. Please also refer to the relevant product specification sheet.

2. For Safe Operation

Be sure to observe the following safety clauses in your operation of the instrument(s). MTT cannot undertake any responsibility and guarantee for any damage and/or loss caused by improper operation contrary to or neglecting these clauses.

 WARNING	Disregard of this clause may cause fatal harm or serious bodily injury due to fire or electric shock.
 CAUTION	Disregard of this clause may cause bodily harm or damages to nearby objects due to electric shock or other accidental happenings.

The following safety symbols are used on the instrument and in this document:

-  Equipment protected throughout by double insulation or reinforced insulation
-  Functional earth terminal (Do not use this as a protective earth terminal.)

WARNING

- All electrical connections must be made to the terminal block of the socket. All connections and disconnections must be made with no power applied to the instrument. Otherwise, electric shock may result.
- Do not disassemble or modify the instrument, and do not replace the power fuse. Otherwise, fire or electric shock could result.
- Do not allow any foreign matter (metal chips, water, liquid, etc.) to get into the instrument. Should any foreign matter enter the instrument, immediately unplug the power cable, and contact MTT or its distributor.
- When the instrument is used for applications that require higher reliability and safety, such as transportation, communication, power generation control and medical equipment, special consideration should be taken in safety design to prevent such equipment from malfunctioning as a whole system.
- Do not operate the instrument in an explosive atmosphere containing flammable vapors, gases or dusts. Otherwise, an explosion may result.
- Do not place any combustible materials in the vicinity of the instrument.
- Because no power switch is provided on the instrument, the power supply of the instrument cannot be turned off on the instrument side. So, be sure to provide a power circuit breaker for the power source of the instrument. Note that the breaker should be installed in a location close to the instrument for the convenience of operation. And the breaker should be marked as a "disconnecting device" for the instrument.

CAUTION

- Use the instrument within the operating conditions described in the published product specification. Failure to do so may cause fire or damage to the instrument.
- Avoid operating the instrument in locations where extreme temperature changes can cause condensation. Otherwise, it may be damaged and malfunction.
- Avoid operating or storing the instrument in locations where corrosive gases are present or chemical solvents may splash.
- Hot-swapping may not cause immediate defects in the unit, but this should be avoided as far as possible.
- For the sake of safety, installation and wiring must be performed by qualified personnel with expertise in electronics, electricity or instrumentation engineering.

3. Precautions

Be sure to observe the following precautions to ensure proper operation of the instrument(s). If these precautions are disregarded, the performance of the instrument(s) cannot be guaranteed.

For Handling:

- This is a precision instrument. Do not drop or throw the instrument.
- This product contains electronic parts. Do not splash water on the product and do not dip it in water. For installation, select a place where no condensation occurs.
- Avoid storing or installing the instrument in locations subject to direct sunlight, high temperature, dust, high humidity or vibration.

On Power Supply:

Check the power rating on the specification label of the unit to ensure you use the correct power supply.



- Rating 100 to 240V AC, 50 to 60Hz, 4.5VA max. (Input range: 85 to 264V AC, 47 to 63Hz)
- Rating 24V DC, 1.5W max. (Input range: 24V DC \pm 10%)
- Rating 100 to 240V DC, 2.0W max. (Input range: 85 to 264V DC)

For Installation:

- The instrument is intended for indoor installation.
- Refer to section 10 "Mounting / Demounting" to install the unit on a DIN rail or wall.
- Operating environmental conditions:
 - Temperature range: -5 to 55°C
 - Humidity: 5 to 90% RH
 - Altitude up to 2000 meters
- Do not block the vents in the instrument.
- Be careful not to ground the minus (-) terminal of the power supply.
- Use an independent grounding or alternative grounding which does not allow current to flow in.
- The instrument should be installed as shown in the sketch below, namely, in such a position that the label on the front panel is readable in the right direction.
- For effective heat dissipation, allow a space of at least 100 mm above and below the unit. When units are used in multiple stacks, they should be spaced at least 130 mm apart from each other. If the required minimum space is not available, take appropriate heat protection measures by, e.g., placing a partition between the units. Provide a ventilation hole or install a cooling fan to improve airflow. Keep adequate working space in front of and on both sides of the unit.


Installation Position

Typical Installation Example

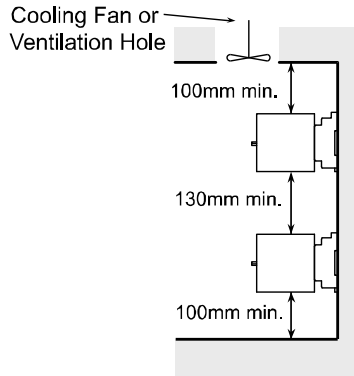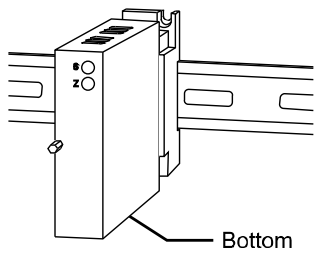

On Wiring:

- Connections to the instrument should be made to the terminal block. For assignment of the terminals, refer to section 6. The recommended screwing torque is 0.8 to 1.0 Nm.
- For lead wires, use a highly flexible stranded conductor. The recommended nominal cross-section of the lead wire conductor is 0.5 to 2.0 mm².
- The connection of the lead wire to the terminal block should be made with the insulated crimp terminal attached to the end of the wire. Without the insulation, short circuit or electric shock may occur. The recommended thickness of the crimp terminal is 0.7 to 1.0 mm. Note that only up to two (2) crimp terminals can be connected to one (1) terminal screw. In this case, the thickness of the crimp terminal should be not greater than 0.8 mm.

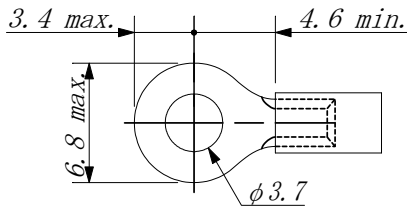

To Avoid Erroneous Measurements:

- In order to reduce the influence of noise, the input/output wire and power supply wire should not be used in a same bundle or same conduit. They should be installed separately with a minimum distance of 200 mm.
- Avoid wiring the signal lines in the vicinity of equipment generating magnetic fields or electromagnetic waves, such as electric motors and large-scale transformers. If inevitable, anti-noise measures such as employment of shielded wires are indispensable.
- At least 30 minutes of warm-up is required prior to operation.
- Any sensor or equipment to be connected to the instrument should be selected in consideration of the input/output impedance of the same. (For detailed specifications, refer to section 4 or the relevant product specification sheet that can be downloaded from our website at <https://www.mtt.co.jp>.)

4. About the Product

The MS3759 converts dry contact signals including open collector or wet contact signals into relay contact (form A or C contact) signals.

Features:

- Input is selectable between dry contact and wet contact using the front-accessible switch.
- Pin and socket contacts are gold-plated (0.2µm) to ensure high reliability and long-term stability.
- High dielectric strength of 2,000 VAC between input, [output 1, output 2], power, and ground.


- The power unit can deliver AC power ranging from 85 to 264V steplessly without switching to meet varied power requirements.
- Plug-in type for better maintainability
- Drop-proof terminal screws for ease and safety of installation
- Fuse installed in the power line as standard.

Specifications

Input Signal	Dry contact or open collector: Pull-up: Input code "01": Approx. 13V, 3.3kΩ Input code "02": Approx. 24V, 6.2kΩ Wet contact: High voltage level: 5 to 30V DC Low voltage level: 0 to 1V DC Input is selectable between dry contact and wet contact using the front-accessible switch.																									
Input Resistance	With power: 1MΩ min. (5V DC input) Without power: 10kΩ min.																									
Allowable Input Voltage	30V DC max., continuous.																									
Maximum Frequency	1Hz																									
Input Pulse Width	30ms min.																									
Output Signal	Two independent relay contact closure signals: Form A contact (Photo MOS relay) Form C contact (Mechanical relay)																									
Relay Activation without Power	Form A contact: OFF Form C contact: NO and COM are open; NC and COM are closed.																									
Relay Start-up Limitation	The relay gets ready for action about 2 seconds after power-up.																									
Output Operation	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="3" style="text-align: center;">Input Setting: Dry contact or open collector</td> </tr> <tr> <td colspan="3" style="text-align: center;">Input Waveform</td> </tr> <tr> <td rowspan="2" style="text-align: center; vertical-align: middle;">Relay Activation</td> <td style="text-align: center;">NORMAL</td> <td style="text-align: center;">Not Activated / OFF Activated / ON Not Activated / OFF</td> </tr> <tr> <td style="text-align: center;">REVERSE</td> <td style="text-align: center;">Activated / ON Not Activated / OFF Activated / ON</td> </tr> <tr> <td colspan="3" style="text-align: center;">Input Setting: Wet contact</td> </tr> <tr> <td colspan="3" style="text-align: center;">Input Waveform</td> </tr> <tr> <td rowspan="2" style="text-align: center; vertical-align: middle;">Relay Activation</td> <td style="text-align: center;">NORMAL</td> <td style="text-align: center;">Activated / ON Not Activated / OFF Activated / ON</td> </tr> <tr> <td style="text-align: center;">REVERSE</td> <td style="text-align: center;">Not Activated / OFF Activated / ON Not Activated / OFF</td> </tr> <tr> <td colspan="3" style="text-align: center;">*Relay Activation: Form C / A contact</td> </tr> </table>	Input Setting: Dry contact or open collector			Input Waveform			Relay Activation	NORMAL	Not Activated / OFF Activated / ON Not Activated / OFF	REVERSE	Activated / ON Not Activated / OFF Activated / ON	Input Setting: Wet contact			Input Waveform			Relay Activation	NORMAL	Activated / ON Not Activated / OFF Activated / ON	REVERSE	Not Activated / OFF Activated / ON Not Activated / OFF	*Relay Activation: Form C / A contact		
Input Setting: Dry contact or open collector																										
Input Waveform																										
Relay Activation	NORMAL	Not Activated / OFF Activated / ON Not Activated / OFF																								
	REVERSE	Activated / ON Not Activated / OFF Activated / ON																								
Input Setting: Wet contact																										
Input Waveform																										
Relay Activation	NORMAL	Activated / ON Not Activated / OFF Activated / ON																								
	REVERSE	Not Activated / OFF Activated / ON Not Activated / OFF																								
*Relay Activation: Form C / A contact																										
Response Time	30ms max.																									
Insulation Resistance	100MΩ min. (@ 500V DC) between input, output 1, output 2, power, and ground.																									
Dielectric Strength	Input / [Output 1, Output 2] / [Power, Ground]: 2000V AC for 1 minute (Cutoff current: 0.5mA) Power / Ground: 2000V AC for 1 minute (Cutoff current: 5mA) Output 1 / Output 2: 500V AC for 1 minute (Cutoff current: 0.5mA)																									
Relay Contacts	Form A contact: Maximum load voltage (peak AC/DC): 350V Maximum continuous load current (peak AC/DC): 120mA Open-state leakage current: 1µA max. ON resistance: 50Ω max. (load current 120mA)																									


Relay Contacts	Form C contact: Maximum allowable voltage: 250V AC, 220V DC Maximum allowable current: 2A Maximum allowable power: 125VA, 30W Minimum applicable load: 10µA, 10mV DC Electrical life: 0.1A, 50V DC (resistive load): 10 ⁶ cycles at 85°C, 5Hz; 10mA, 10V DC (resistive load): 10 ⁶ cycles at 85°C, 2Hz. Mechanical life: 100×10 ⁶ cycles
Surge Withstand Capability	Tested as per ANSI/IEEE C37.90.1-1989.
Storage Temperature	-10 to 60°C

Rated Load Curve for Contact (Form C contact)

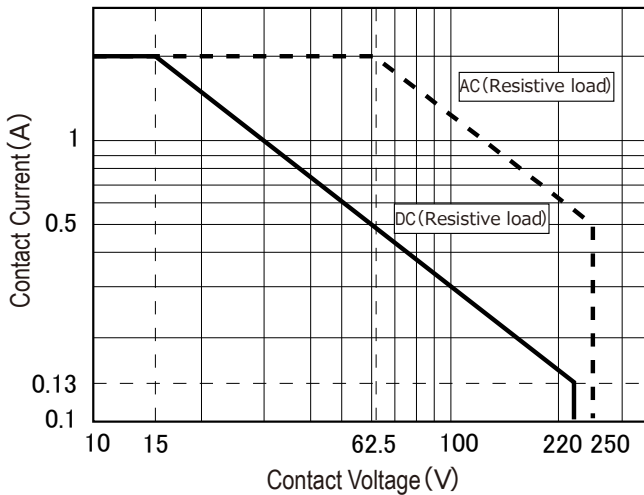

Contact voltage 15V: Transition in DC (resistive load)
Contact voltage 62.5V: Transition in AC (resistive load)


Life Curve (Form C contact) (Reference data)

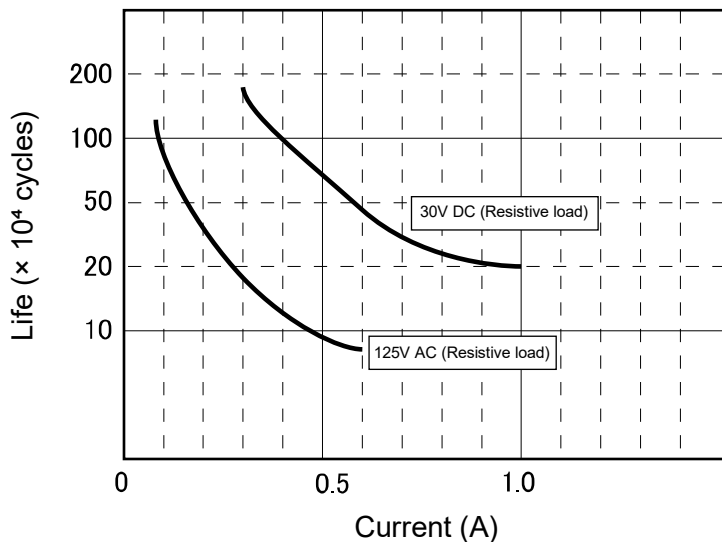

Inductive load life data (for reference): 100,000 cycles with inductive load 100V AC, 100mA, L/R = 1.4ms

Form A contact relays (photo MOS relays) are recommended for applications involving a large number of opening and closing actions.


5. External Dimensions & Terminal Assignments

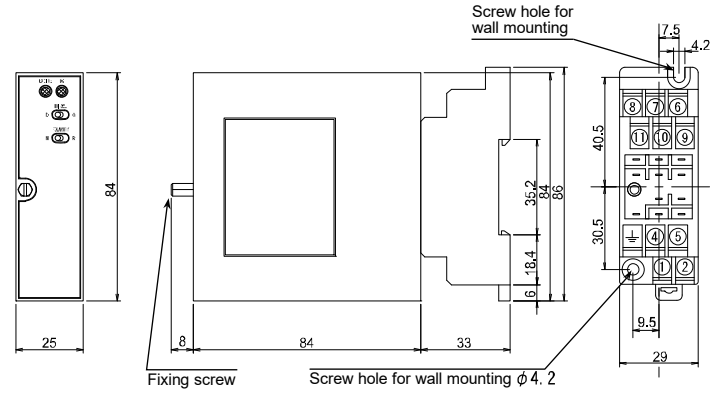

6. Terminal Connection Diagram


Output type: Form C contact

Output type: Form A contact

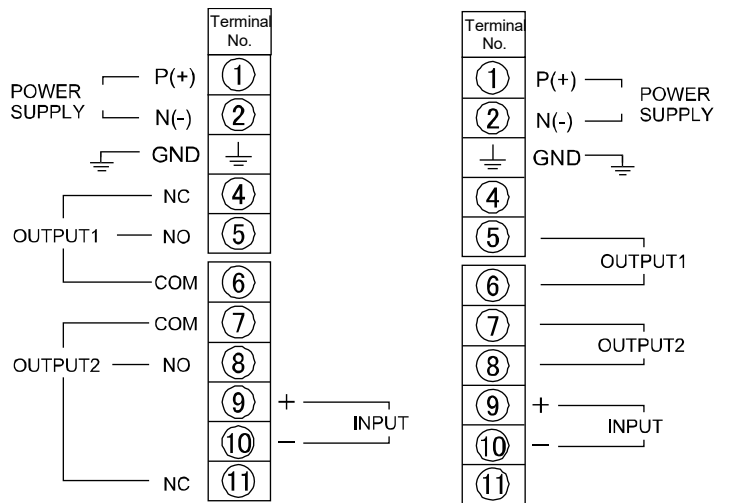

7. Terminal Connection

The following steps should be taken prior to the connection.

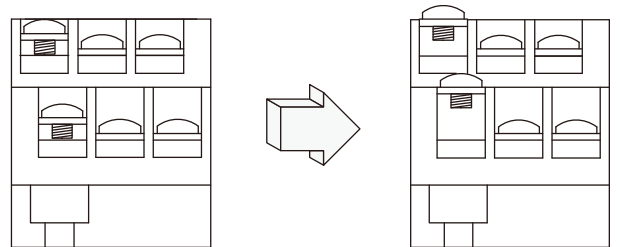


(1) Loosen the terminal screw.

(2) Insert the tip of a screwdriver bit beneath the washer and push it up to make ample room to receive a cable.


8. Output Connection

When connecting an inductive load, such as an electric motor, to the relay output, connect a relay contact protection circuit across the load as shown below.

Example of AC power connection:

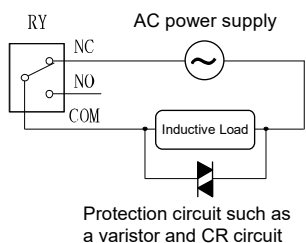

Example of DC power connection:

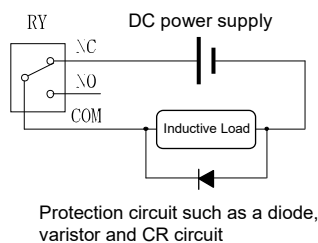

9. Power Line Connection

The terminals for power supply connection (① and ②) are covered with a plastic plate for safety (see Fig. 1). Open the cover plate and connect the power lines to the terminals (see Fig. 2). Return the cover plate to its original position (see Fig. 3).

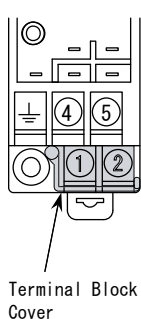


Fig. 1

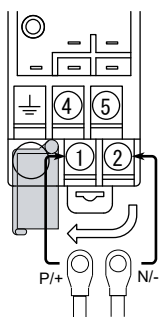


Fig. 2


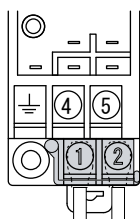


Fig. 3

Note: For your safety, do not make any electrical connections or disconnections with power supplied to the instrument. Make sure that all terminal screws are properly tightened each time you finish the tightening.


10. Mounting / Demounting

Mounting the Socket on a DIN rail

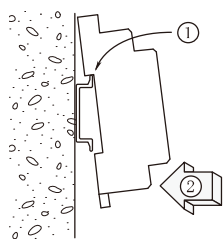


Hold the socket with the slide clamp facing down. Hook the upper edge of the cavity in the rear of the socket over the upper blade of the rail (①), then push the lower part of the socket against the lower blade of the rail so as to make the slide clamp engaged firmly with the rail (②).

Demounting the Socket

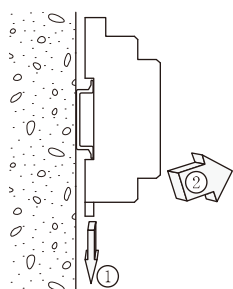

Push the slide clamp downward with a flat-head screwdriver bit or the like (①), and pull the lower part of the socket toward you (②).

Main Unit Installation / Removal

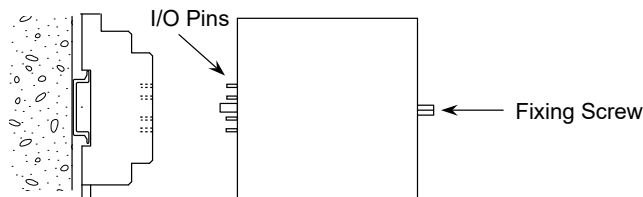


Installation

- Identify the top and the bottom of the unit and insert the I/O pins straight into the corresponding pin slots (receptacles) on the socket.
- Tighten the fixing screw to fix the unit firmly in position.

Removal

- Loosen the fixing screw.
- Pull out the unit carefully not to bend the I/O pins.

11. Part Names and Functions

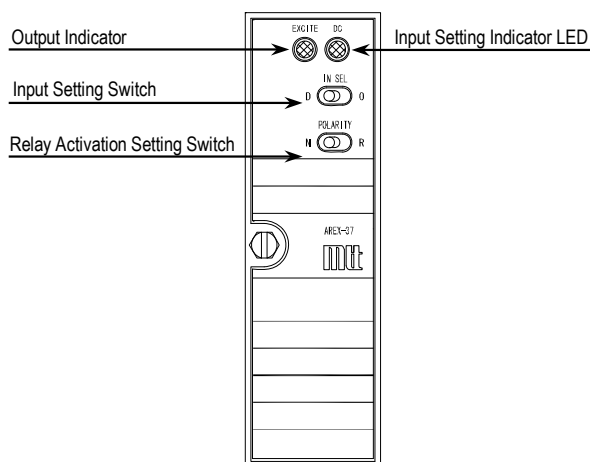

11-1. Output Indicator

Output Type	Output	Output Indicator
Form A contact	ON	ON
Form C contact	Activated	
Form A contact	OFF	OFF
Form C contact	Deactivated	

11-2. Input Setting Indicator LED

Input Setting	LED
Wet contact	ON
Dry contact or open collector	OFF

11-3. Input Setting Switch

Switch Position	Input Setting
D (Left)	Wet contact
O (Right)	Dry contact or open collector

11-4. Relay Activation Setting Switch

Switch Position	Polarity
N (Left)	NORMAL
R (Right)	REVERSE

12. Maintenance and Inspection

Check the unit for proper characteristics and settings about once every two years.

13. Warranty Period and Scope

[Warranty Period]

MTT's hardware products are warranted for a period of seven (7) years from the date of shipment.

[Warranty Scope]

- 1) MTT warrants that its hardware products are free from defects in materials and workmanship and conform to its product specifications.
- 2) MTT ships the products under its appropriate quality management system and quality control, but does not warrant, expressed or implied, that the operation, output, or indication of the hardware will be uninterrupted or error free. MTT shall not be liable and make no warranty for any damage to or any safety or performance trouble in the customer's or any other third party's equipment if the operation, output, or indication is interrupted or faulty.
- 3) If, during the warranty period, the product proves to be defective when used in accordance with the relevant user's manual, the product will be repaired or replaced.
- 4) This warranty does not apply to any malfunction or failure resulting from the following:
 - a. Improper or incomplete maintenance or calibration,
 - b. Any other cause, which does not relate with the delivered product,
 - c. Modification or repair by any person other than MTT, and
 - d. Natural disasters or other unavoidable accidents, for which MTT is not liable.